

KEY CODES for Metronics QC10V

(each command below is case sensitive, with a space between the word “KEY” and the number code and MUST be terminated with a carriage return)

COMMAND	QC10V Front Panel Key Name
KEY 1	Left Wide Key
KEY 2	Right Wide Key
KEY 3	First Axis
KEY 4	Second Axis
KEY 5	Third Axis
KEY 6	Fourth Axis
KEY 7	Left Arrow
KEY 8	Up Arrow
KEY 9	Right Arrow
KEY 10	Down Arrow
KEY 11	Soft Key 1
KEY 12	Soft Key 2
KEY 13	Soft Key 3
KEY 14	Soft Key 4
KEY 15	Soft Key 5
KEY 16	Print
KEY 21	0
KEY 22	1
KEY 23	2
KEY 24	3
KEY 25	4
KEY 26	5
KEY 27	6
KEY 28	7
KEY 29	8
KEY 30	9
KEY 31	.(decimal point)
KEY 32	+/-
KEY 33	Enter
KEY 34	Finish
KEY 35	Cancel
KEY 36	Quit
KEY 44	Power